



**EH1570**  
**4" USB Desk Fan**



**User Manual**  
Please retain for future reference

# IMPORTANT

## Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference. Before use please inspect the product including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

## OPERATING INSTRUCTIONS

1. Place the fan on a clean, level surface out of the reach of children.
2. Make sure the power switch on the rear (A) of the unit is in the off (o) position.
3. Connect the USB plug (B) to a spare USB port on your computer. **If you want to power the desk fan via a USB adaptor please ensure the adaptor has a minimum output of 1A.**
4. Move the power switch (A) on the rear of the fan to the on (-) position.
5. The body of the fan can be moved up or down to achieve the optimal angle.



## PRODUCT SAFETY

- Children must not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance must be placed on a firm flat surface.
- Do not cover when in use.
- Do not attempt to open the unit, there are no user serviceable parts inside.
- Do not use water to clean the unit. Cleaning should be carried out with a clean, dry brush or cloth.
- Do not insert any object between the grilles into the fan blades.
- Do not use the fan in excessively hot or humid environments.

## CLEANING AND MAINTENANCE

1. Ensure that the unit is disconnected from the USB power source and the power switch (A) is in the off (o) position.
2. The screws may be removed from the outer ring of the fan guard to enable access to the blades.
3. The blades should be cleaned gently with a clean, dry brush or cloth. Do not use water to clean the fan.
4. Ensure that all screws are correctly tightened when reattaching the fan guard.

# TECHNICAL SPECIFICATION

Material.....	Metal
Power Source .....	USB
Voltage.....	5V DC
Fan Blade Diameter .....	96mm
Fan Speed.....	2000 RPM
Power Consumption.....	1.95W
Product Weight.....	319g
Product Dimensions.....	150 x 80 x 150mm
Power Cord Length .....	1.2m

## SERVICE WARRANTY

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

Our guarantee is administered by our retailers.

If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Prem-i-air, only your retailer can arrange a replacement.

If your product fails within the guarantee period and the product needs to be repaired or replaced, you must contact the retailer from whom you bought it.

The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order.

If you have just received your product and require technical help in using it, please call our Help Desk on (0845) 459 4816

If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd.,  
Lancots Lane, Sutton,  
St. Helens, Merseyside.  
WA9 3EX

[www.prem-i-air.com](http://www.prem-i-air.com)