



1. THREE-PHASE STARTING
2. AUXILIARY STARTING
3. AUXILIARY STARTING
4. INVERTER MODULE
5. 9-PIN CONNECTOR
6. 12V REGULATOR
7. 0/1 EMERGENCY STOP SWITCH
8. PRESSURE CONTROL DEVICE
9. START RELAY
10. STARTING MOTOR
11. 9-PIN CONNECTOR
12. HATZ 6-PIN CONNECTOR M
13. HATZ 6-PIN CONNECTOR F
14. INTERNAL CONTROL PANEL
15. THERMAL SWITCH

16. INTERFACE MODULE
17. ELECTROSTOP
18. 12-PIN CONNECTOR
19. PREHEATING GLOW PLUG
20. TEMPERATURE SENSOR
21. 2-PIN CONNECTOR
22. VEHICLE CONTROL PANEL
23. 12-PIN CONNECTOR
24. AUXILIARY STARTING
25. CYLINDRICAL CONNECTOR
26. PREHEATING RELAY
27. PUMP RELAY
28. MOTOR START RELAY
29. 4-PIN CONNECTOR

(N00TEC30S)