



- DESCRIPTION**
- 1 THREE-PHASE STARTING
  - 2 AUXILIARY STARTING
  - 3 AUXILIARY STARTING
  - 4 INVERTER MODULE
  - 5 9-PIN CONNECTOR
  - 6 12V REGULATOR
  - 7 STEP MOTOR
  - 8 4-PIN CONNECTOR
  - 9 START RELAY
  - 10 STARTING MOTOR
  - 11 CHOKE MAGNET
  - 12 OIL ALERT
  - 13 MOTOR COIL
  - 14 INTERNAL CONTROL PANEL
  - 15 THERMAL SWITCH
  - 16 INTERFACE MODULE
  - 17 0/1 EMERGENCY STOP SWITCH
  - 18 12-PIN MINI-FIT CONNECTOR
  - 19 BATTERY PLUS POLE BUSH
  - 20 BATTERY
  - 21 2-PIN MINI-FIT CONNECTOR
  - 22 VEHICLE CONTROL PANEL
  - 23 12-PIN MINI-FIT CONNECTOR
  - 24 AUXILIARY STARTING
  - 25 CYLINDRICAL CONNECTOR